



EASI-FIT HXSU

Installation & Maintenance

EASI-FIT HXSU

Installation Instructions

Installation and Maintenance Instructions.

THESE INSTRUCTIONS MUST BE READ FULLY BEFORE COMMENCING INSTALLATION.

Owner / installer: The life of this apparatus and its efficiency will be increased if its use and maintenance is carried out in accordance with these instructions and current statutory requirements. The installation and initial adjustments should be carried out by a qualified and competent technician, ensuring the correct PPE is used at all times. Elta should be consulted before substituting or fitting parts from another manufacturer. It is the responsibility of the installer to verify that the installation is in accordance with all current statutory requirements and the owner is given the current User's Manual.

Any modifications to the fan or its installation, even the smallest modification, change or elimination of security components or pieces that influence the efficiency or loss of ventilation, will result in the CE Certification and Elta's warranty being cancelled.

Please note the following indicators used within this document:

WARNING: Hazards associated with electric current and high voltages.

IMPORTANT: Important information.

Elta's policy is one of continual improvement and the right to change a specification at any time without notice is reserved. Whilst every care has been taken to ensure that the contents of this document are correct at time of publication, Elta shall be under no liability whatsoever in respect of such contents.

Elta cannot guarantee the operation of any equipment unless all documented instructions are complied with, without variation.

1. General

- 1.1 It is important these Installation and Maintenance Instructions are fully adhered to.
- 1.2 Full details of the unit supplied are shown on the product nameplate. If in doubt about any detail contact Elta or its agents for clarification.
- 1.3 All electrical installation must be carried out by suitably qualified and competent personnel in accordance with all current statutory requirements.
- 1.4 These instructions cover only the Elta product and do not include the supply or installation of any safety equipment that may be required e.g. adequate guarding or protection from rotating parts and proper electrical isolation.
- 1.5 Any declarations made by Elta about product installation and safety, are dependent on the fan equipment being used within installations which themselves meet the requirements of the relevant Standards and Directives of your region.
- 1.6 The fan is designed for use in an ambient temperature of up to 50°C and up to 95% relative humidity. The fan is not suitable for corrosive or explosive atmospheres.
- 1.7 The installer should provide easy access to the fan to facilitate future maintenance.
- 1.8 The installer should ensure the fan is adequately supported.
- 1.9 This product is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the product safely. Young children should be supervised to ensure that they do not play with the appliance.

WARNING: The fan must be isolated from the power supply during installation and maintenance. The fan must be earthed in accordance with the local regulations.

2. Installation

- 2.1 Upon receipt, the fan equipment should be visually inspected to check for any damage. The unit is normally supplied as assembled fan housing incorporating external chevron, internal louver shutter, assembled fan (wired for form B airflow), flying lead (four core) with loose capacitor. Ensure that the impeller is free to rotate before and after installation.
- 2.2 If there are any queries concerning the fan equipment, Elta should be contacted prior to the installation.
- 2.3 The Sidewall housing requires a square hole in the side of the building as per the dimensions in the above table and must be securely mounted in the desired position to suit the application.
- 2.4 Insert the Sidewall (from outside) in the hole and secure to the building structure by drilling and fixing the sheet flashing of the unit. Apply sealant as required to weatherproof the unit.
- 2.5 With the Unit securely installed, the external chevron unit and internal louver shutter can be clipped into place. Ensure that all fixings are secure.
- 2.6 Check the details on the motor rating plate to ensure that the correct power supply (voltage, frequency and phase) is available. An incorrect power supply will lead to permanent damage to the fan motor.
- 2.7 Refer to the appropriate wiring diagram. Ensure that all earth connections are made.
- 2.8 Means for electrical disconnection must be incorporated in the wiring installation in accordance with the relevant wiring and electrical regulations.
- 2.9 If the fan is being used through a speed regulation device, either electrically or electronically, refer to the relevant control device instructions, however the minimum speed of the fan must be sufficient to open the louver shutters of the Sidewall unit.

EASI-FIT HXSU

Installation Instructions

3.

Start-up
- 3.1

Before power is supplied to the unit, check that the wiring is correct as per the fan connection diagram.
- 3.2

At initial start-up, check that impeller rotation and airflow direction is correct.
- 3.3

Check that the motor amperage draw does not exceed the nameplate rating.
4.

Fan Maintenance
- 4.1

Inspection of the fan at IEasi once every 12 months is recommended to ensure that the motor, fan blades, and supporting guards, are clean. Any build up of dust and deposits on the blades or guards should be removed using a non-abrasive cleaner. The Sidewall can be cleaned using a suitable pressure hose, although care must be taken not damage the aluminium louvre shutters or to saturate the fan motor.
- 4.2


All fastenings should be checked for tightness. In addition, all rotating items should be checked.
- 4.3

Bearings are of the ‘sealed for life’ type and will not need a detailed inspection.

WARNING: Only a suitably qualified and competent person may carry out maintenance after the electrical supply has been isolated. Particular care must be taken when automatic switching controls are used.

5.

Assembly

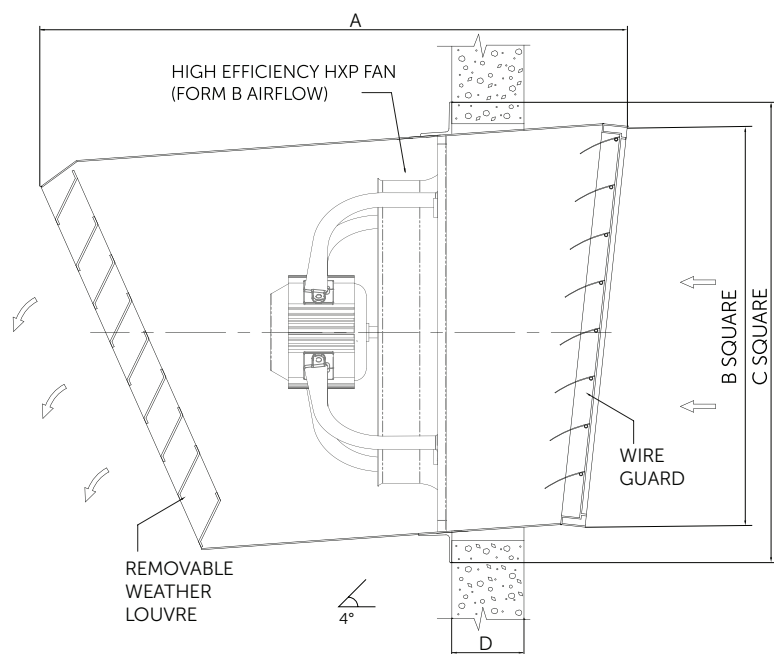

Product Code	A	B	C	D
HXSU450	828	575	714	100
HXSU500	840	655	755	100
HXSU560	870	725	825	100
HXSU630	900	805	866	100
HXSU710	956	847	955	100
HXSU800	1070	971	1025	100

Dimensions in mm.

EASI-FIT HXSU

Installation Instructions

6.

Wiring
- 6.1


Check that the fan unit supplied is suitable for the supply voltage and type of fan being replaced.
- 6.2

Remove the terminal plate on the motor which will provide access to the terminal connections. A suitably qualified and competent person should carry out the electrical installation in accordance with the current applicable regulations, in particular IEE 552-01-02/03. Particular attention should be paid to the connections of the capacitor.

6.3


Single Phase

FORM "A" AIRFLOW MODELS

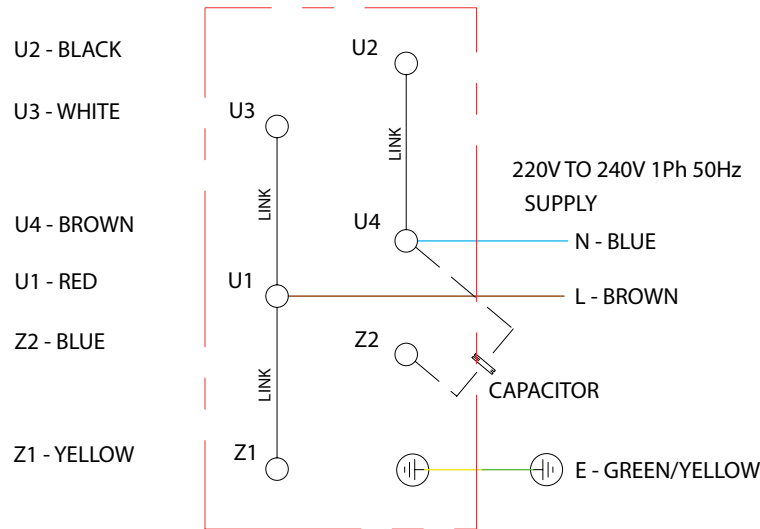

ANTI-CLOCKWISE ROTATION

FORM "B" AIRFLOW MODELS

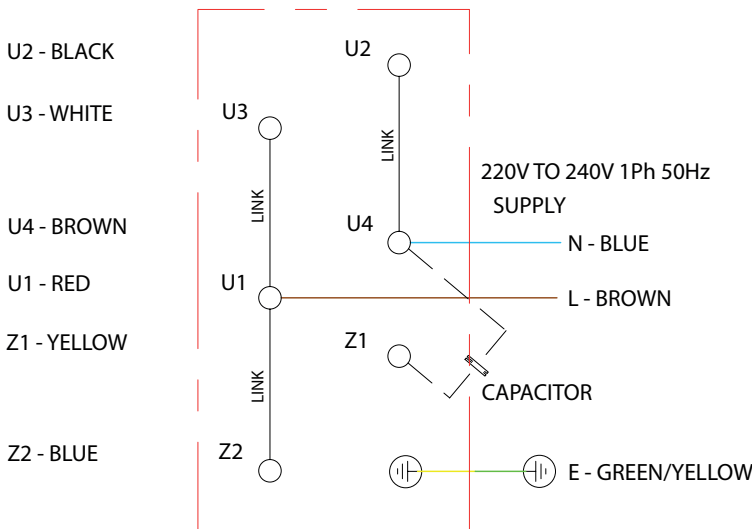



TO REVERSE THE MOTOR ROTATION
INTERCHANGE Z1 YELLOW & Z2 BLUE.

CLOCKWISE ROTATION

EASI-FIT HXSU

Installation Instructions

6.4 Three Phase

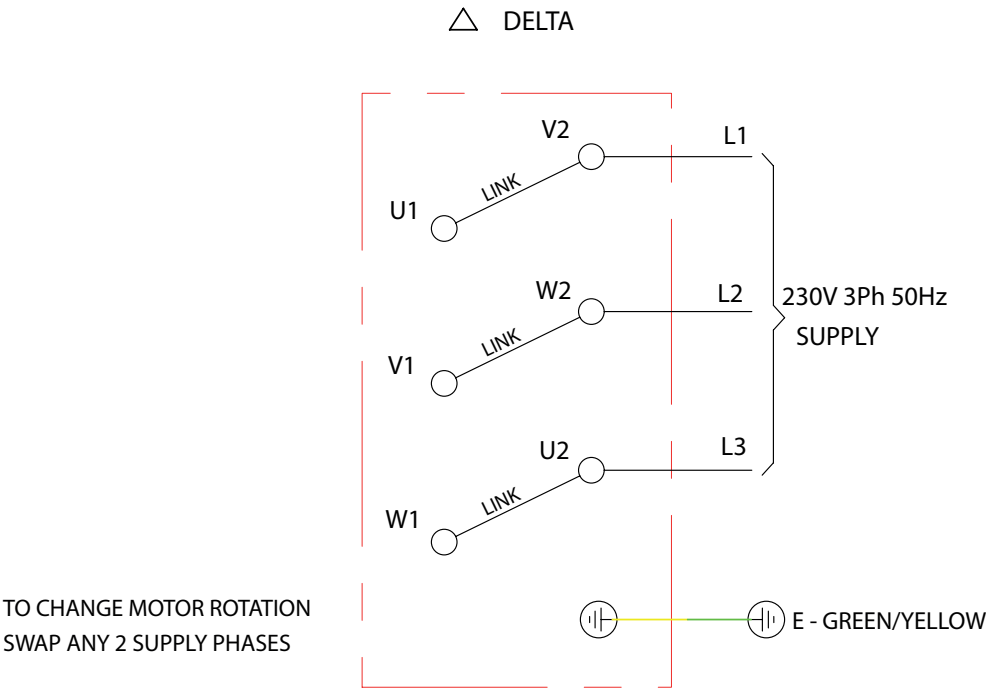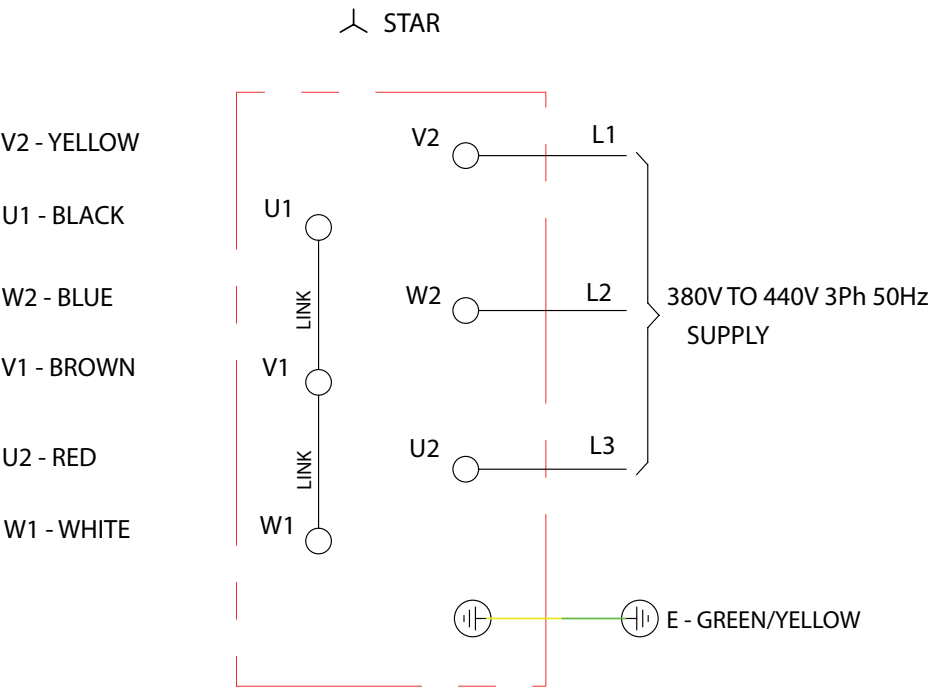


6.5 Replace the terminal cover and test run the fan unit, checking the rotation and fan currents.

EASI-FIT HXSU

Installation Instructions

7. Dimensional Data

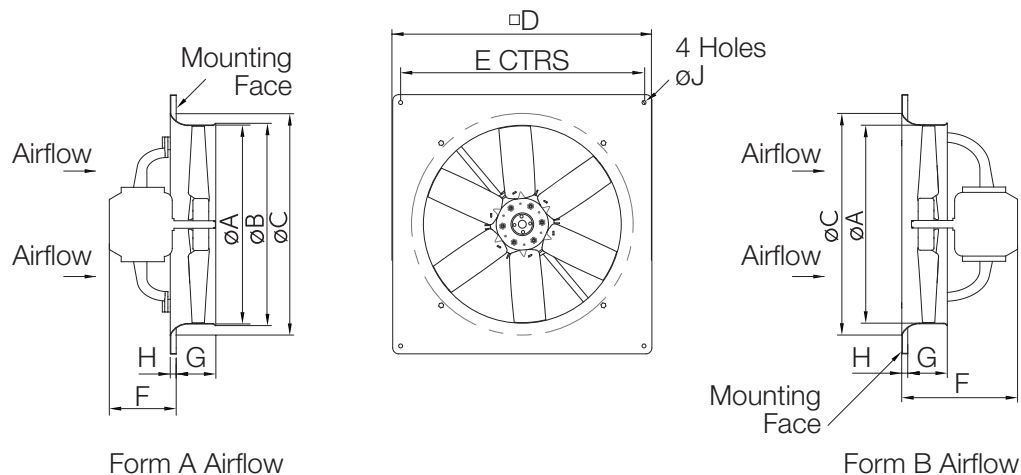

Product Code	A	B	C	D	E	F (A Airflow)	F (B Airflow)	G	H	J
HXP45041	450	462	500	575	535	157	269	95	15	10
HXP45043	450	462	500	575	535	186	299	95	15	10
HXP45061	450	462	500	575	535	173	286	95	15	10
HXP45063	450	462	500	575	535	173	286	95	15	10
HXP50041	500	512	560	655	615	182	305	100	15	10
HXP50043	500	512	560	655	615	182	305	100	15	10
HXP50061	500	512	560	655	615	169	293	100	15	10
HXP50063	500	512	560	655	615	169	293	100	15	10
HXP56043	560	577	620	725	670	182	321	100	15	10
HXP56063	560	577	620	725	670	169	323	100	15	10
HXP63061	630	647	700	805	750	189	328	105	20	10
HXP63063	630	647	700	805	750	189	328	105	20	10
HXP63083	630	647	700	805	750	187	326	105	20	10
HXP71061	710	725	765	850	810	204	341	103	27	10
HXP71063	710	725	765	850	810	191	328	103	27	10
HXP80061	800	817	880	973	910	202	353	105	30	10
HXP80063	800	817	880	973	910	202	354	105	30	10

EASI-FIT HXSU

Notes

[illegible]

**Guarantee**

Elta or its agents will, within a period of 1 year from the date of dispatch from their works, repair or, at its option, replace any goods, which are proven to have defects as a result of defective materials or workmanship.

The goods MUST be returned to Elta, carriage paid, for examination. An Elta Engineer or appointed person should attend to carry out any work, unless otherwise agreed. Elta will not accept accounts for workmanship by others.

Please see the Elta warranty booklet for full details on submitting a warranty claim.

Any modifications to the system or its installation, even the smallest modification, change or elimination of security components or pieces that influence the efficiency or loss of ventilation, will result in the CE Certification and Elta's warranty being cancelled.

Recycling

Elta use components, when possible, that are suitable for recycling at the end of the product's life, components can be segregated as stated below and processed in accordance with local regulations. Metallic items can be segregated and recycled; Electrical and Electronic equipment such as motors, cables and control devices can be segregated for WEEE recycling; Cardboard, wood, packaging, and plastic components can be widely recycled. Items not listed should be segregated in accordance with local authority zero waste hierarchy recommendations.

Tel **+44 (0)1725 511422**
Email **agriculture@eltauk.com**
eltauk.com/agriculture

Issue A. 06.2025